

## Charging the headphones




**Although the headphones are charged before shipping, we recommend that they be recharged before initial use.**

- 1) Plug AC Power Pack into wall socket and switch on.
- 2) Connect AC Power Pack plug into the Charge Socket on the headphone stand.
- 3) Fit all headphones to the stand and gently insert the charge lead plug from the stand into the socket of the adjacent headphone (see diagram above).
- 4) **Make sure all headphones are turned off (the switch is on the volume control).**
- 5) Allow headphones to charge for a minimum of 12hrs.
- 6) **Avoid charging for longer than 20 hours.**



**The same AC Power Pack that supplies the charger unit during recharging is also used to power the transmitter during operation of the system.**

- 1) Plug AC Power Pack into wall socket and switch on.
- 2) Connect AC Power Pack jack plug into the power socket on rear of the transmitter (see diagram on right).
- 3) Extend transmitter aerial & connect audio device to the audio socket on the front of the transmitter (**ensure the volume on the audio device is not turned up too far– if distortion occurs turn volume down**).
- 4) Remove the headphones from the stand and turn on (green LED indicates a good battery state). Adjust the volume control for comfortable listening. Headphone should operate between 4 to 8 hours before requiring recharge.
- 5) After use turn the headphones off & return them to the stand and plug in the charging lead.

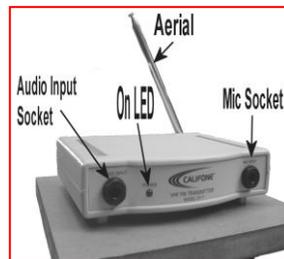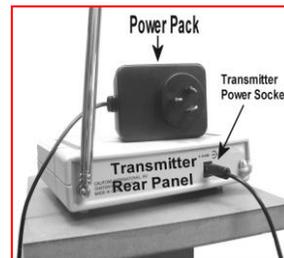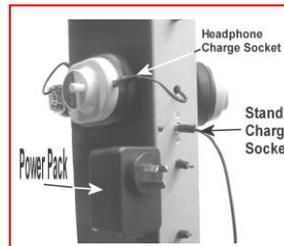

### **IMPORTANT NOTICE: BATTERY CARE**

At Sitech the quality of the products we sell is very important to us. We have noticed that the batteries in the cordless headphones are not lasting as long as they could. After investigating we have determined that in many cases the premature failure of these batteries is due to over-discharging. Once this occurs the battery is beyond saving. Please ensure that the headphones are turned off (the switch is on the volume control) when not in use and while they are being charged. If the LED on the headphone shows red this means the battery is flat and it should be switched off immediately and not used until it has been recharged.